



Step 6: After taking the levelsystem into service FILL OIL



These are **additional guidelines** for "taking the levelsystem into service" for the caravan.
This operation must be performed AFTER FOLLOWING the process described in the installation manual (step 6)

NOTICE ! When this process is not performed in the correct manner irreparable damage can be caused !!!



- Oil filling screw in pump.



- Refilling of hydraulic oil.

Step 1 Remove the oil filling plug from the pump (with Allen key 5mm.)

Caution! Take care the end cap of the pump remains in the same position

Step 2 Fill the pump with oil, carefully, until the oil runs out of the pump.
(oil supplied / type: Pentosin CHF 11S)

Step 3 Extend one AXLE SUPPORT entirely (full stroke)

Step 4 Install the oil filling plug in the pump

Step 5 Retract the AXLE SUPPORT

Now you are sure that the level system is completely filled with hydraulic oil.